



Cosmic Vending Machines



Main Board & Driver Board

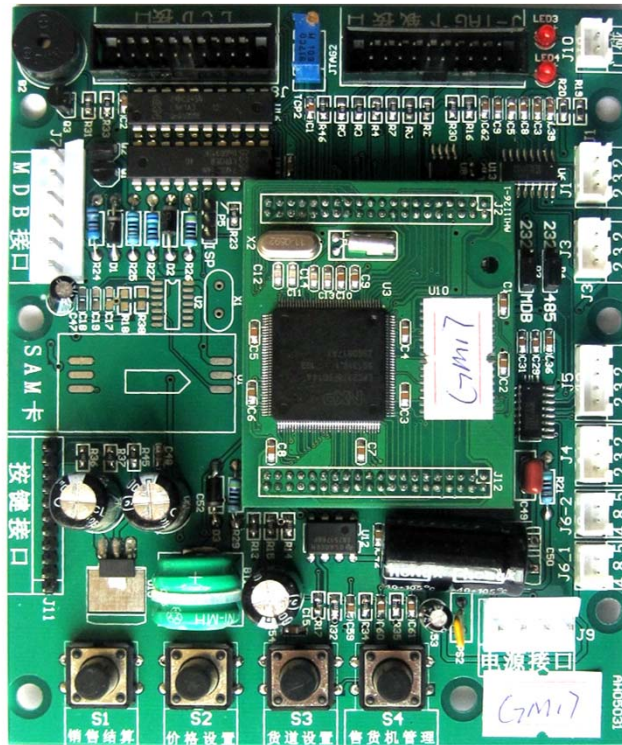

MAIN BOARD

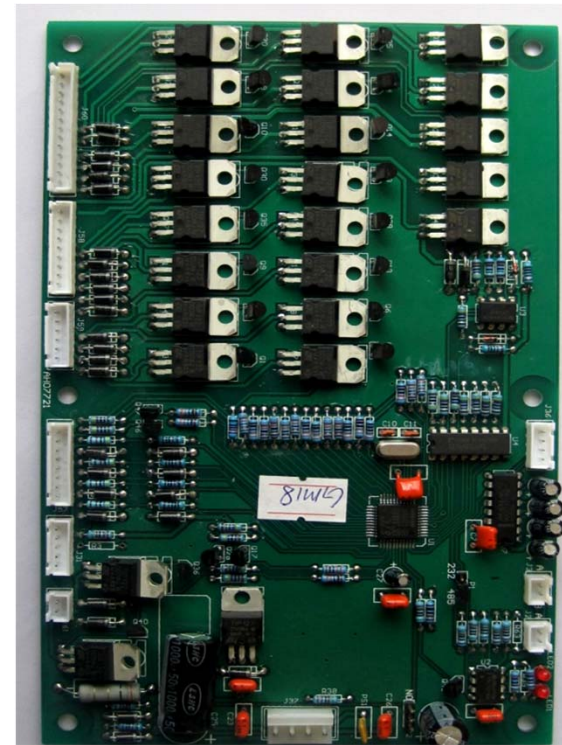

DRIVER BOARD

Selection Keypad

Old Keypad




New Keypad



1. In the Standby Mode, here are the roles of the available Function Keys:
 - “H”: Quick View of Machine Status and Basic Settings (Press “J/ ↓” for Page Turning)
 - “J” / “↓” : Page Down
 - “*”: Clear the Credit (e.g.: After refilling coin changer by inserting coins, press “*” to clear the credit shown on LCD.)
2. In the Settings Mode, here are the roles of the available Function Keys:
 - “#”: Confirm / Enter
 - “*”: Cancel / Back / Exit
 - “J” / “↓” : Page Down
 - “H”: Cursor

SELF-TEST

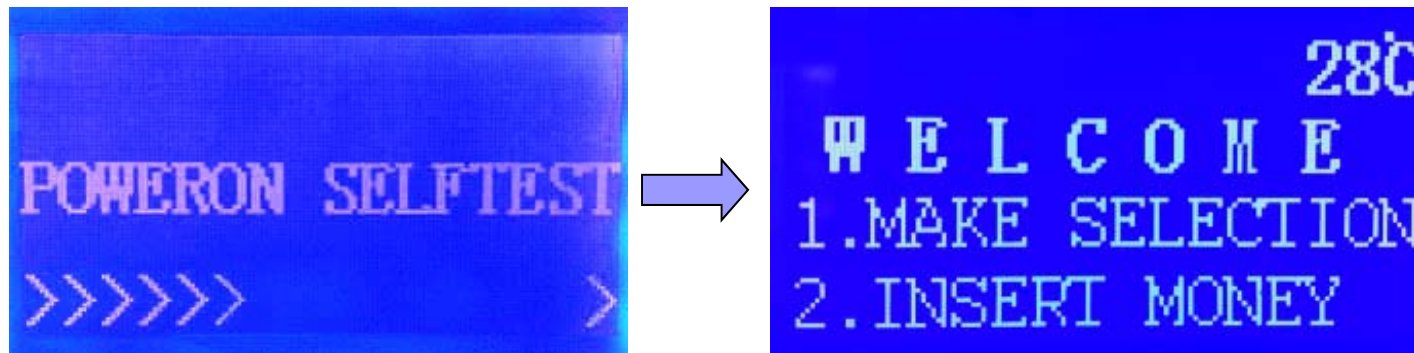

When power-on, machine will begin self-checking automatically to check the following items one by one:

- Coin Changer
- Bill Validator
- Card Reader
- All Columns (Motors)
- Driver Board

ENTER SETUP (I)

(**Note:** Not applicable for machines produced after June 2015)



Open the door,
and press "#" to
input password.




Defaulting Password:
000000



Press "J/↓" to
select menu and
press "#" to
enter, or press
the menu ID to
enter it directly.



ENTER SETUP (II)

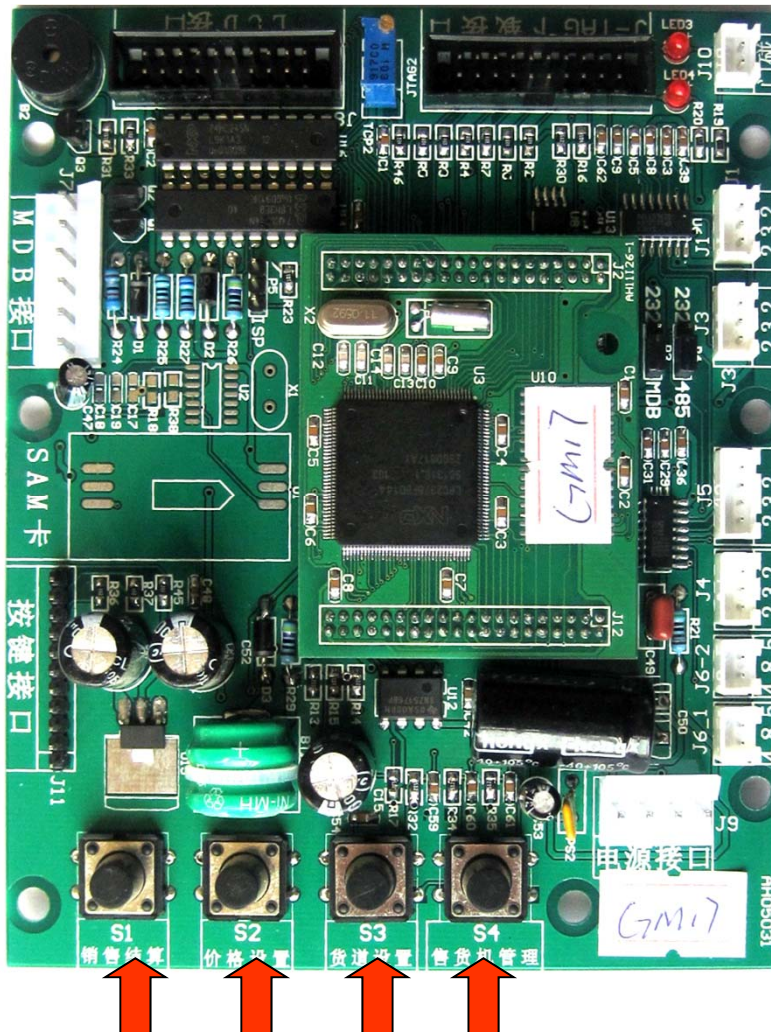

Note:

You can always enter into SETUP mode by pressing and holding the hotkey "S4" until you hear a beep. For quick access to "Audit Query", "Price Setting" & "Column Test", you can use the hotkeys of S1, S2 & S3.

HOT KEYS

- S 1: SETTLEMENT (Audit Query)
- S 2: PRICE SETTING
- S 3: COLUMN TEST
- S 4: SETUP MODE (All Settings)




※1.PRICE SETTINGS

Price Settings include:

- Column Price Setting --- set different prices for each columns;
- Tray Price Setting --- set one price for all columns on a tray
- Machine Price Setting --- set one price for all columns in a machine.

※1.Price Setting----Column Price Setting

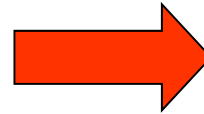

Enter into Setup Mode,
Press "1" or "J/↓" to
enter Price setting
under "Management
Screen " ; or Press
Hotkey S 2




Input Column ID, and
then input Unit price,
press "#" to save your
settings.
e.g.: Input "A1", then
Unit price, Press "#"



Single Column
price is
successful. Press
'J/↓' to set All
columns prices .

※1.Price Setting-----Tray Price Setting

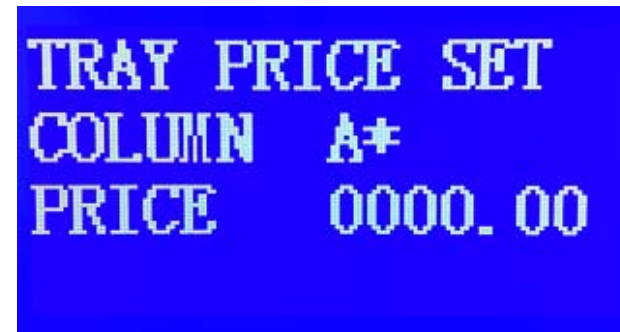

Enter into Setup Mode,
Press "1" or "J/↓" to
enter Price setting
under "Management
Screen " ; or Press
Hotkey S 2





Input Tray ID, and then
input Unit price, press
"#" to save your
settings.
e.g: Input "A", Press "#",
then Unit price, Press "#"



Tray price is
successful.
All columns in this
Tray are same at unit
price .

※1.Price Setting----Whole Price Setting

Note: This setting is disabled for machines produced after June 2015

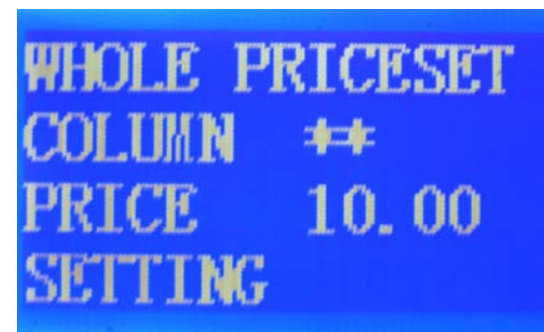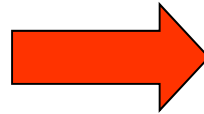


Enter into Setup Mode,
Press "1" or "J/↓" to
enter Price setting
under "Management
Screen"; or Press
Hotkey S 2



Press "#", and then
input Unit price,
press "#" to save
your settings.



Whole price is
successful.
All columns in this
machine are at same
unit price .

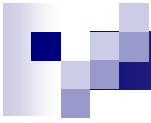


※2. Column Test (Motor Test)

Note:

Motor Test is very useful, as it can help the motor go back to its starting position. When a motor gets stuck or fails to restore, please always try to have it rotate a circle by making a “Motor Test”.

※2.Column Test----Test a single Motor

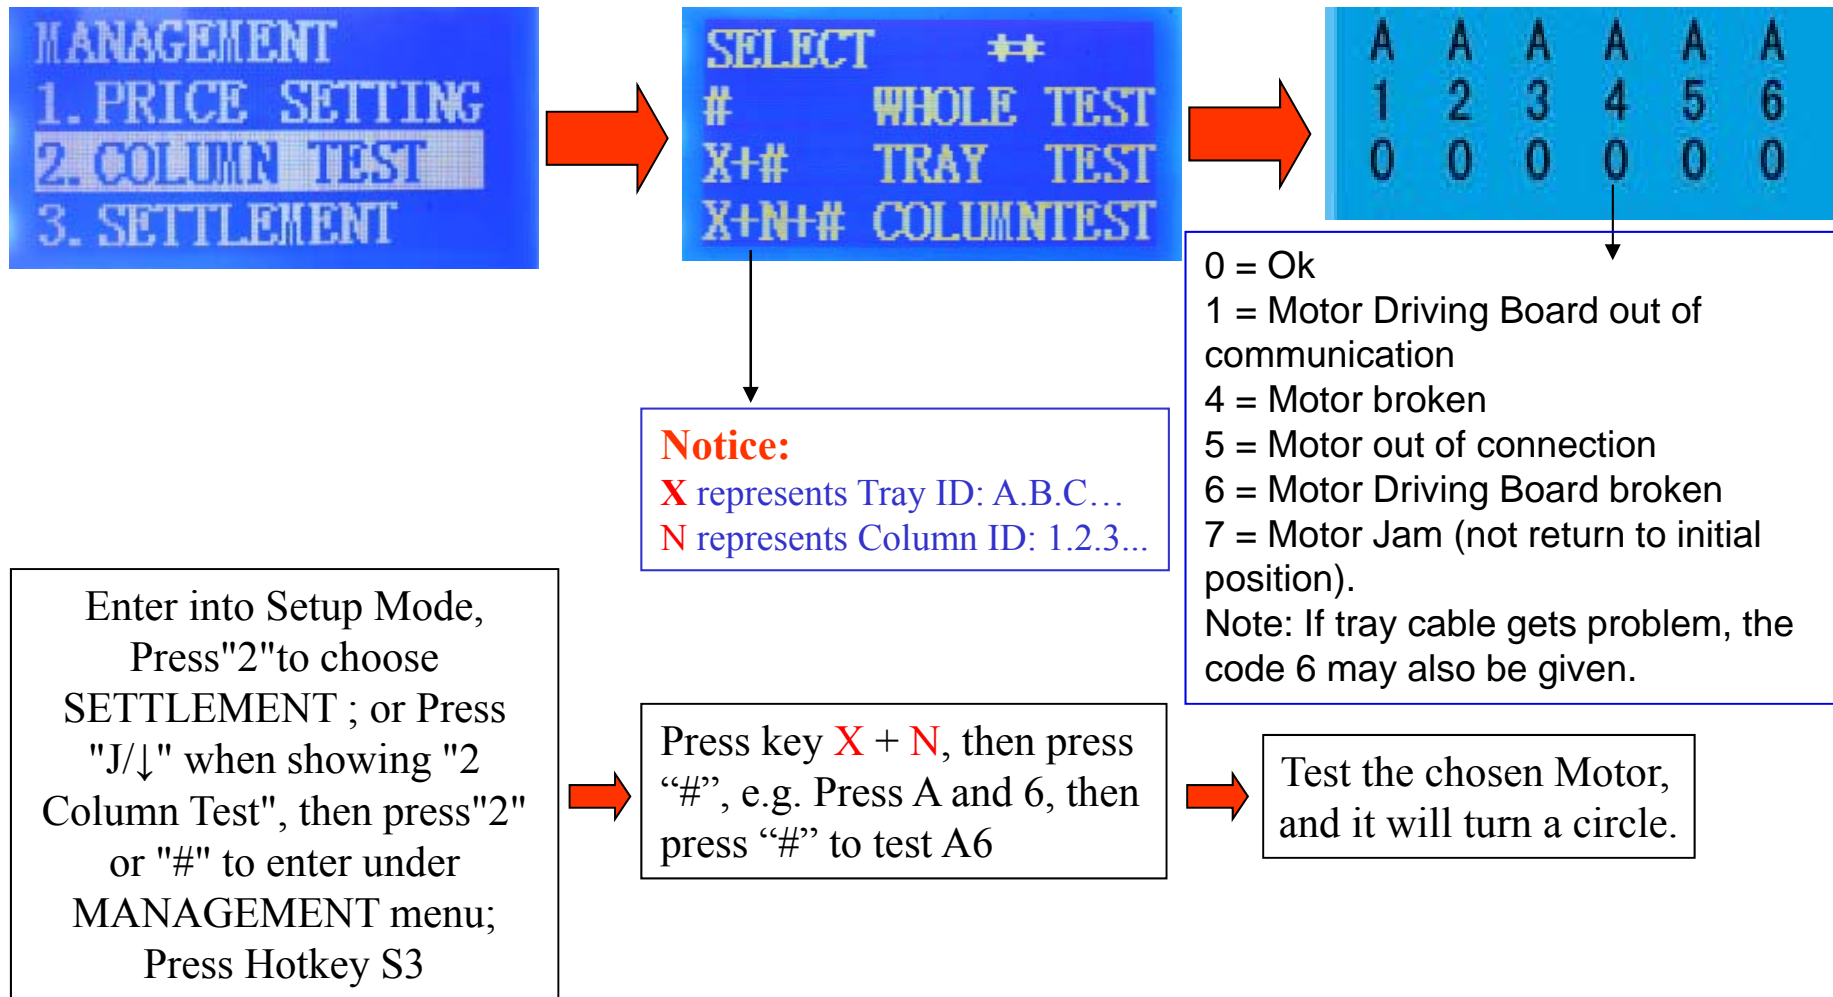

※2.Column Test---Test all Motors on a Tray



Enter into Setup Mode,
Press "2" to choose
SETTLEMENT ; or Press
"J/↓" when showing "2
Column Test", then
press "2" or "#" to enter
under MANAGEMENT
menu;
Press Hotkey S3


Notice:

X represents Tray ID: A.B.C...
N represents Column ID: 1.2.3...

Press key **X**, then "#"
e.g. Press B then "#"

All motors of this tray
will turn a circle. Press
"*" or close door will
stop testing

※2.Column Test---Test all Motors in a machine

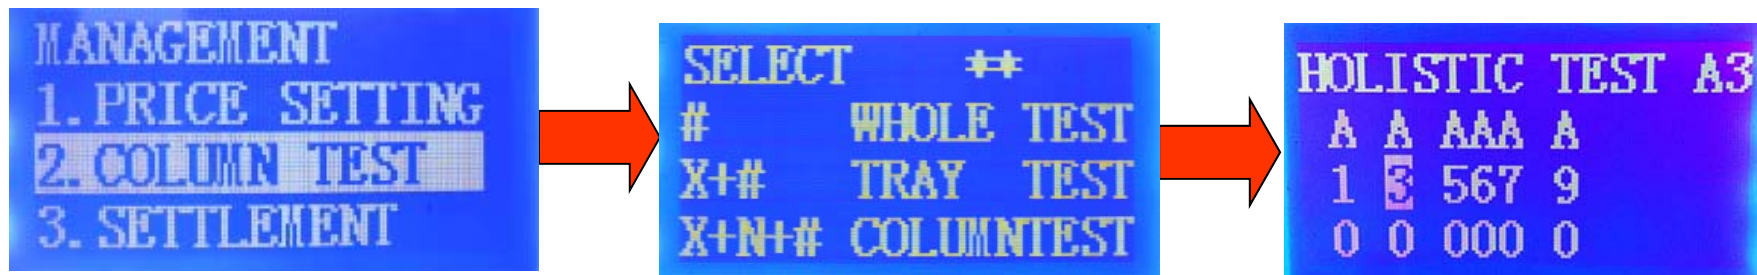


Notice:

X represents Tray ID: A.B.C...
N represents Column ID: 1.2.3...

Enter into Setup Mode,
Press "2" to choose
SETTLEMENT ; or Press
"J/↓" when showing "2
Column Test", then press "2"
or "#" to enter under
MANAGEMENT menu;
Press Hotkey S3


Press "#"

All motors of the
machine will turn
a circle. Press "*" or
close door will
stop testing

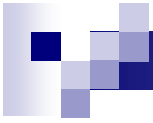


※3.SETTLEMENT

※3.Settlement----Section Sales

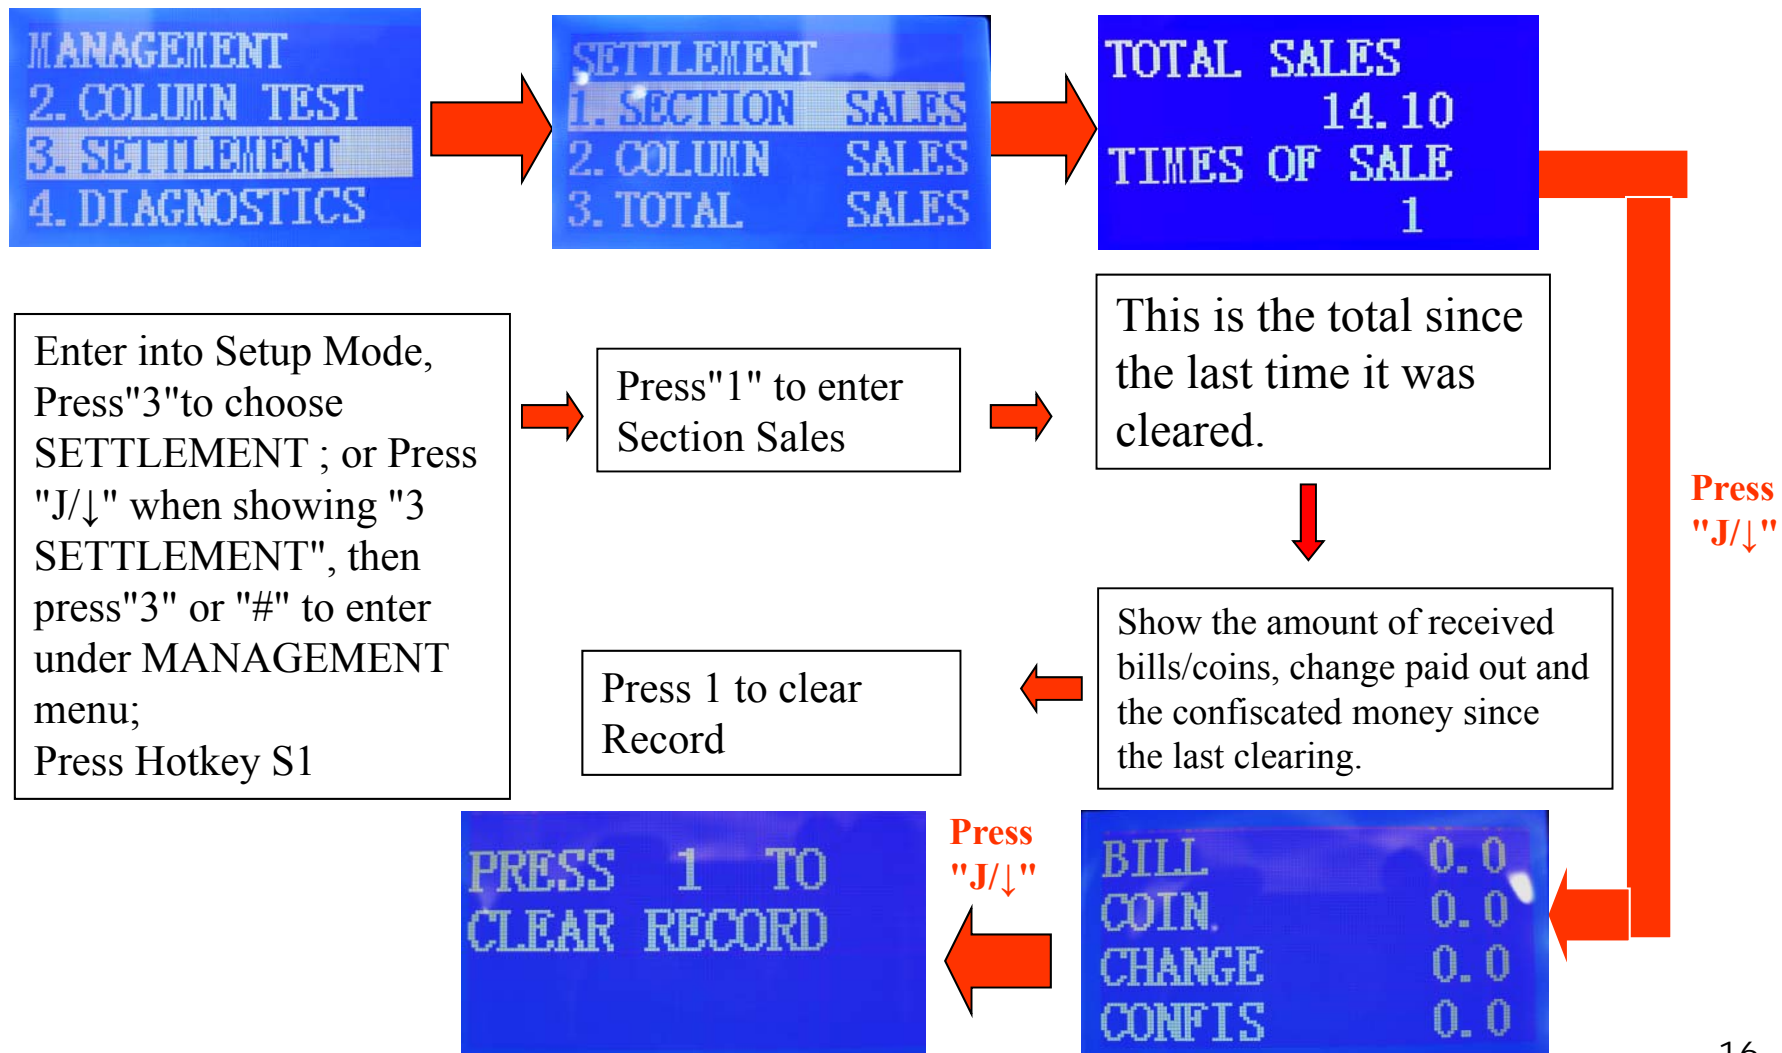

※3.Settlement----Column Sales

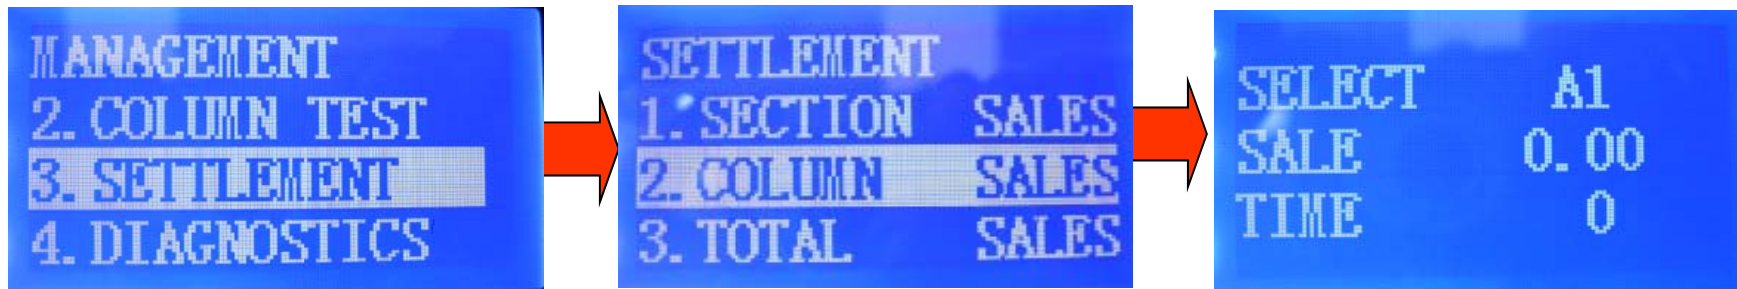

Enter into Setup Mode,
Press "3" to choose
SETTLEMENT ; or Press
"J/↓" when showing "3
SETTLEMENT", then
press "3" or "#" to enter
under MANAGEMENT
menu;
Press Hotkey S1




Press "2"



This is the total
for the Tray since
the last time it
was cleared.

※3.Settlement----Total Sales

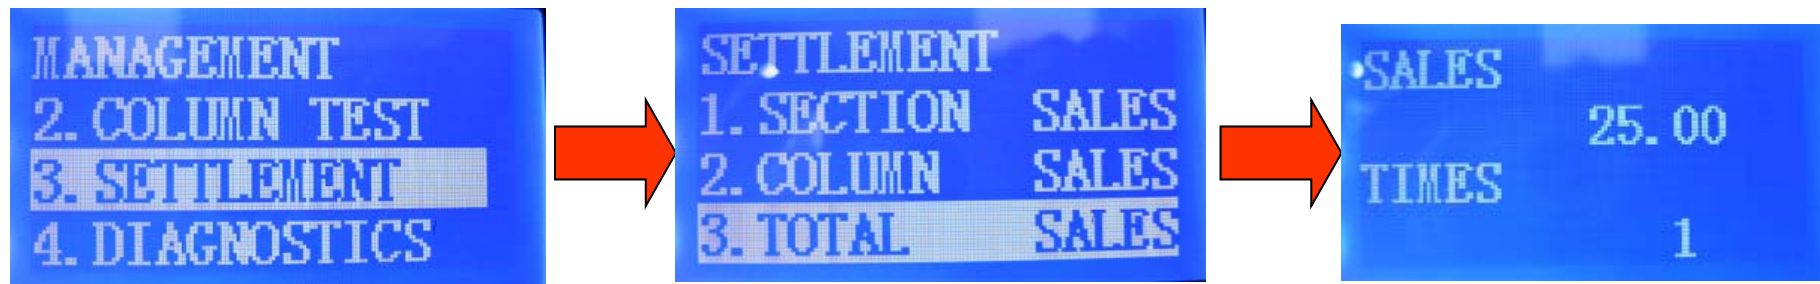


Enter into Setup Mode,
Press "3" to choose
SETTLEMENT ; or Press
"J/↓" when showing "3
SETTLEMENT", then
press "3" or "#" to enter into
MANAGEMENT menu;
Press Hotkey S1

Press "3"

These are the historical
total since machine
initialization. It can only
be cleared by Factory
Reset (Re: [Page 29th](#))

※4.DIAGNOSTICS

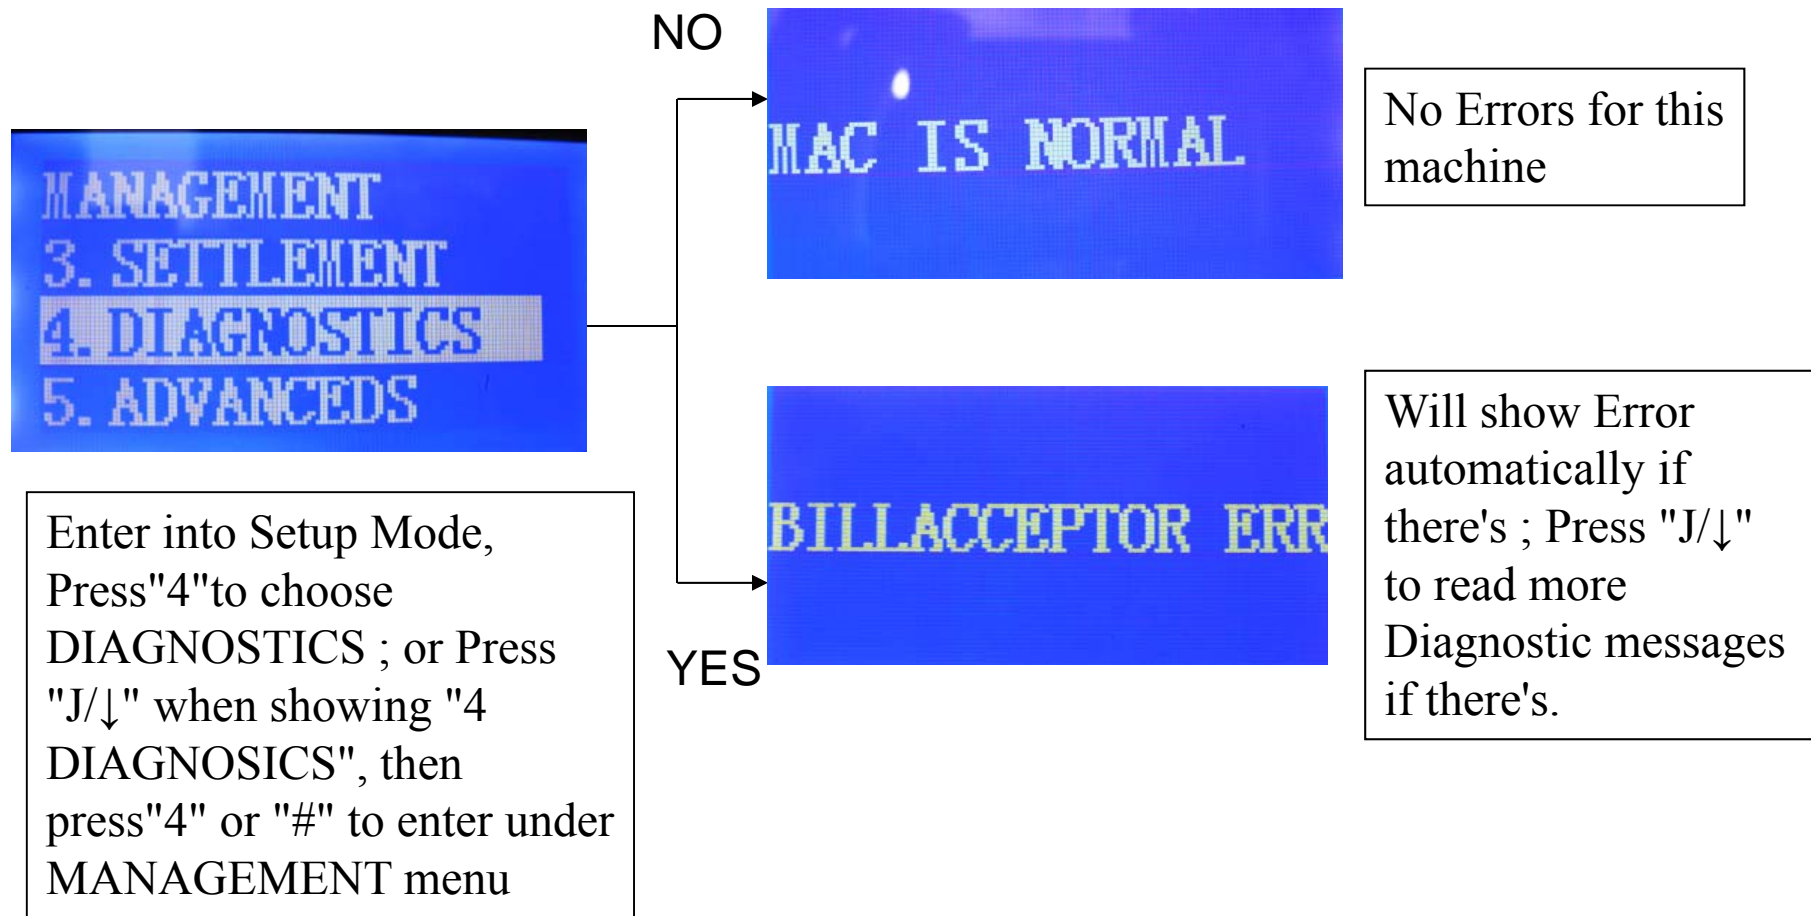

※5.Advanced Set



Enter into Setup Mode, Press "5" to choose ADVANCEDS ; or Press "J/↓" when showing "5 ADVANCEDS", then press "5" or "#" to enter under MANAGEMENT menu

5.Advaned Set

1.Machine Set

2.Column Set

3.Payment Terms

4.Temperature

5.Communication


6.Password Set

7.Time Set

8.Language Set

9.Default Set

※5. Advanced Set---Machine Set

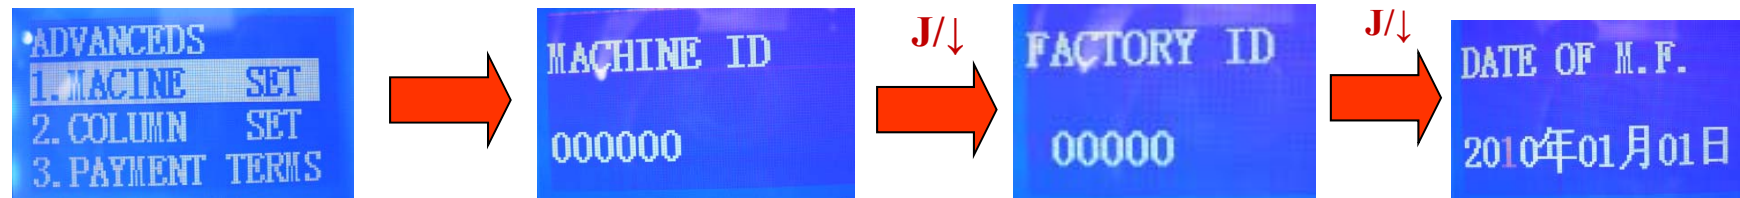

Press "1" to choose "Machine set"; or Press "J/↓" when showing "1 Machine Set", then press "#" or "1" to enter "Machine Set" Under ADVANCEDS menu



Input machine ID



Input Factory ID



To check Machine Manufacture Date

※5. Advanced Set----Column Set




Press "2" to choose "column set", or Press "J/↓" when showing "2 column set", then press "2" or "#" to enter "Column Set" under ADVANCEDS menu

Input Tray No.
e.g: A

E means the column is effective.
+ means the column is coupled to the adjacent column at the left side (i.e.: A7 is coupled to A6)
Press H to couple or uncouple
Press J/↓ to move the cursor

※5. Advanced Set----Payment Terms

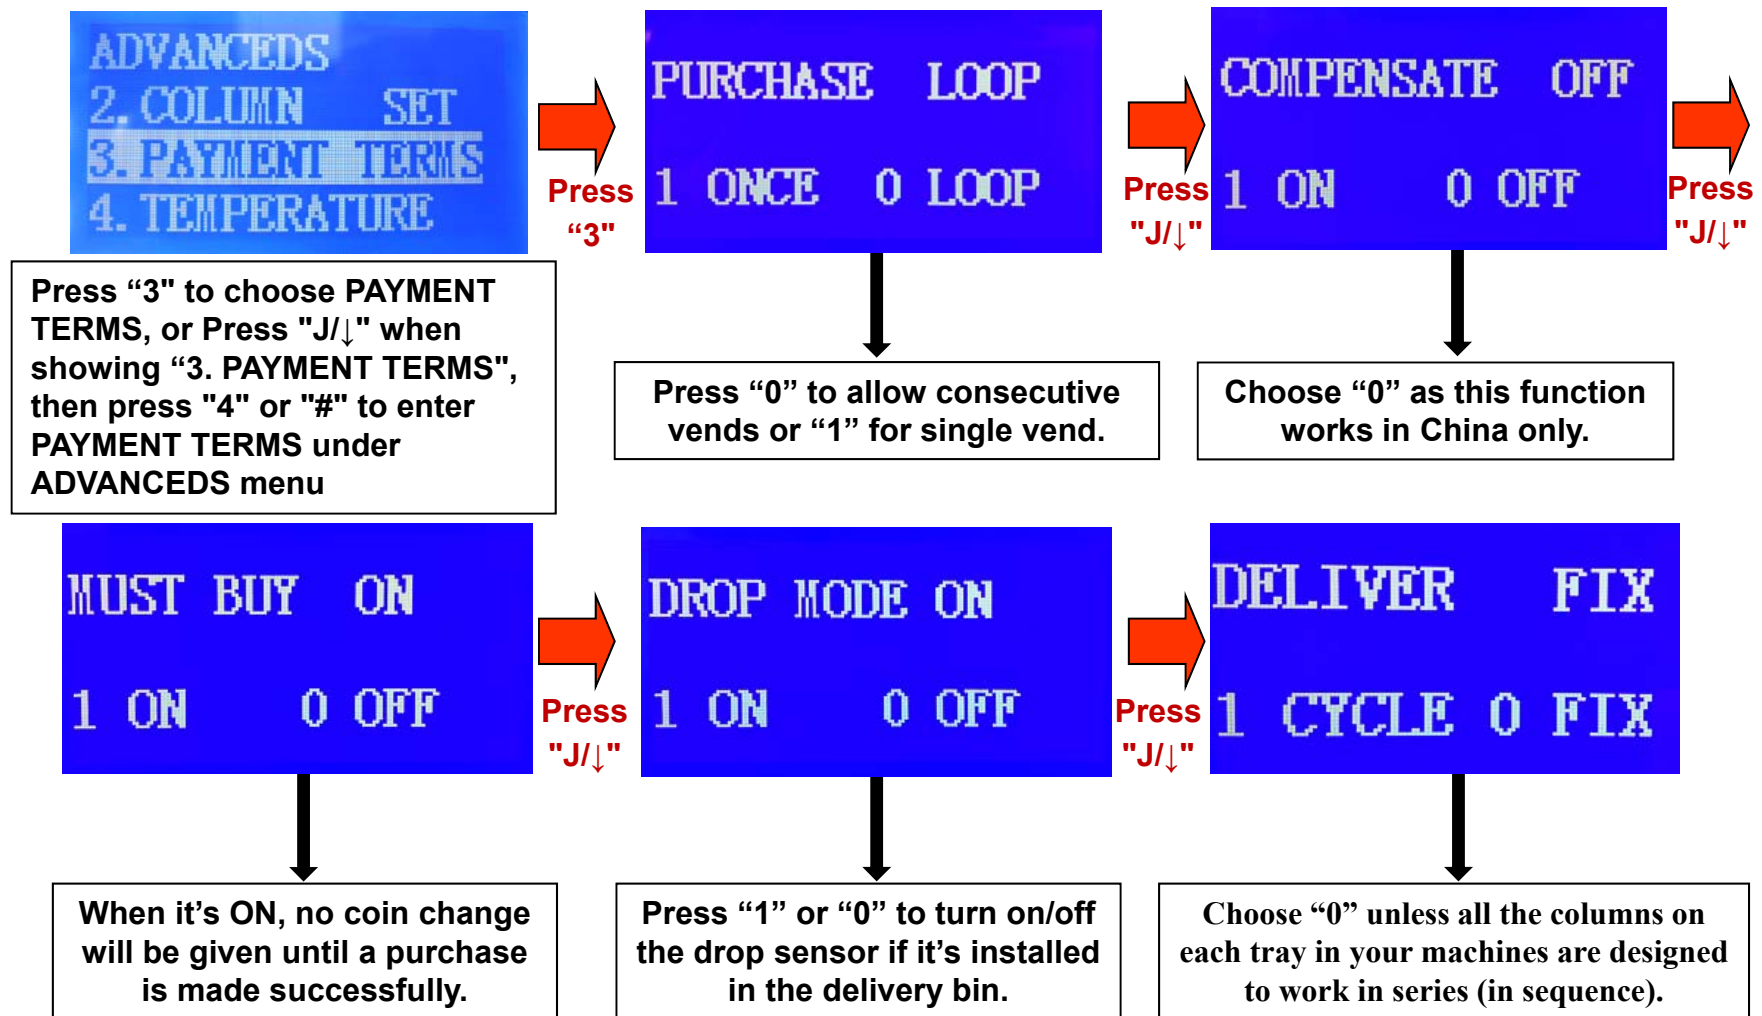


Notice: Press '#' to save your settings; Press '*' to back up or exit.

※5. Advanced Set----Temperature Set



Press "4"

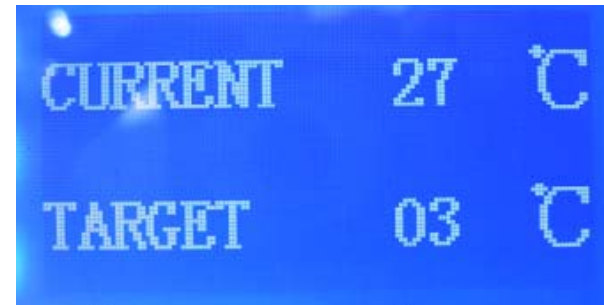

Press
"J/↓"

Press "4" to choose Temperature Set, or Press "J/↓" when showing "4 Temperature", then press "4" or "#" to enter Temperature under ADVANCEDS menu





Input the Target price and Press "#" to save your setting



Press "0" and then "J/↓", you can set cooling timer (cooling periods) to start and stop refrigeration system automatically.
Press "1" to turn on the refrigeration system.
Press "2" to turn off the refrigeration system.
Press "#" to save your setting, and the LCD will show "SUCCESS".


※5. Advanced Set----Communication Set

Note: The communication settings will only be applied when the machine comes with a China made DTU (telemetry) provided by the machine manufacturer.

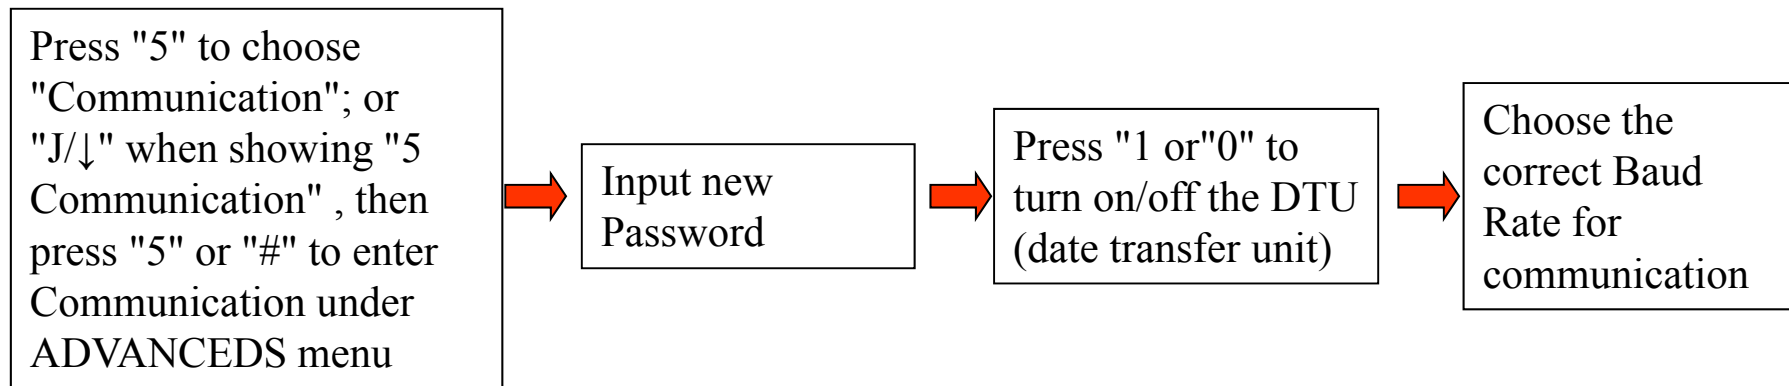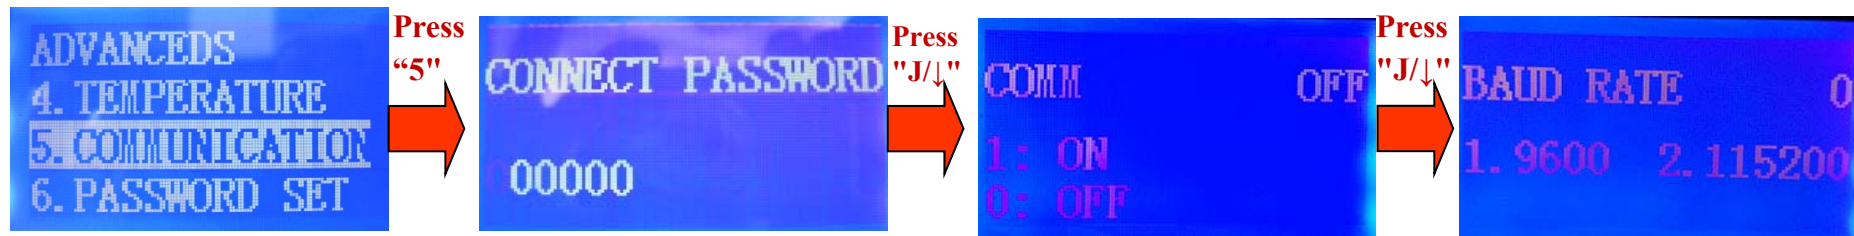

※5. Advanced Set----Password Set

Note: For machines produced after June 2015, this password doesn't make any sense, so you can simply ignore it.

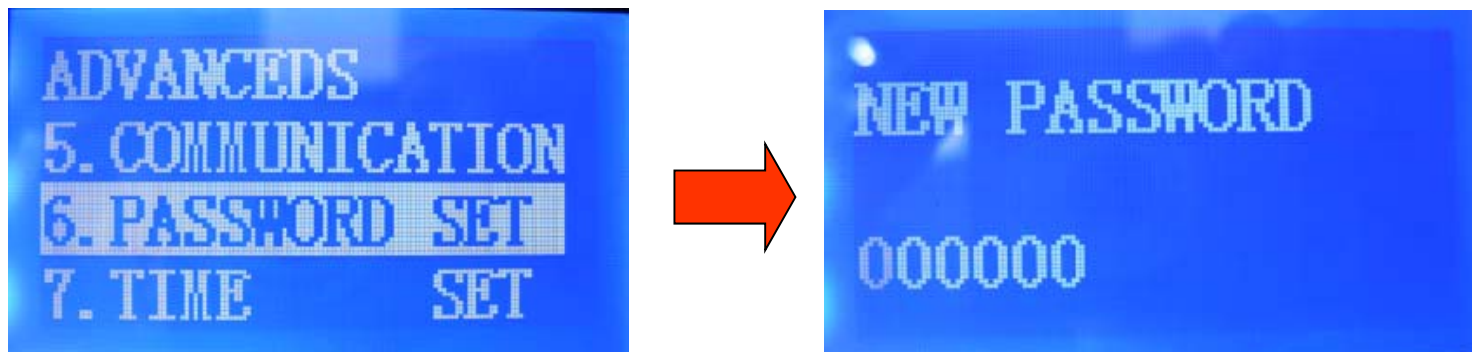

Press "6" to choose "Password Set"; or "J/↓" when showing "6 Password Set", then press "6" or "#" to Enter " Password Set" under ADVANCEDS menu

Input your own password and remember it, press "#" to save your settings

※5. Advanced Set----Time Set




Press "7" or "J/↓"
when showing "7" to
enter into "Time Set"
under ADVANCEDS
menu

INPUT
CORRECT
DATE AND
TIME

Press "#",
Success!

※5. Advanced Set----Language Set


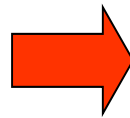


Press "8" or "J/↓"
when showing "8" to
enter into "Language
Set" under
ADVANCEDS menu



Press "0" to choose
English, or Press "1" to
choose Chinese

※5. Advanced Set----Default Set

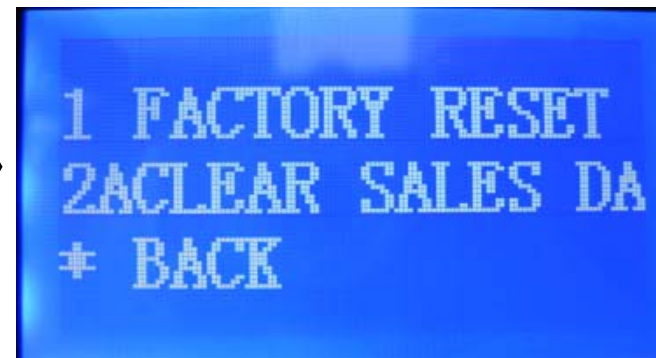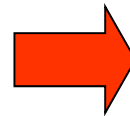

Press "9" or
"J/↓" when showing
"9" to enter into
"Default Set" Under
ADVANCEDS menu



Press "1" to restore the
machine to factory default
settings and all data will
be cleared; Press "2" to
clear the Sales Data only.

※6. MANAGE BILL



Enter into Setup Mode,
Press "6" to choose MANAGE
BILL ; or Press "J/↓" when
showing "6. MANAGE BILL",
then press "6" or "#"

If the machine is not installed
with a bill changer, it will
prompt "NO BILL CHANGE".

If the machine is installed with
a bill changer, you can refill the
bill payout unit by inserting the
designated bills from bill entry.

※7. Quick View of Machine Status

