



# U-TURN ELIMINATOR/TERMINATOR\*

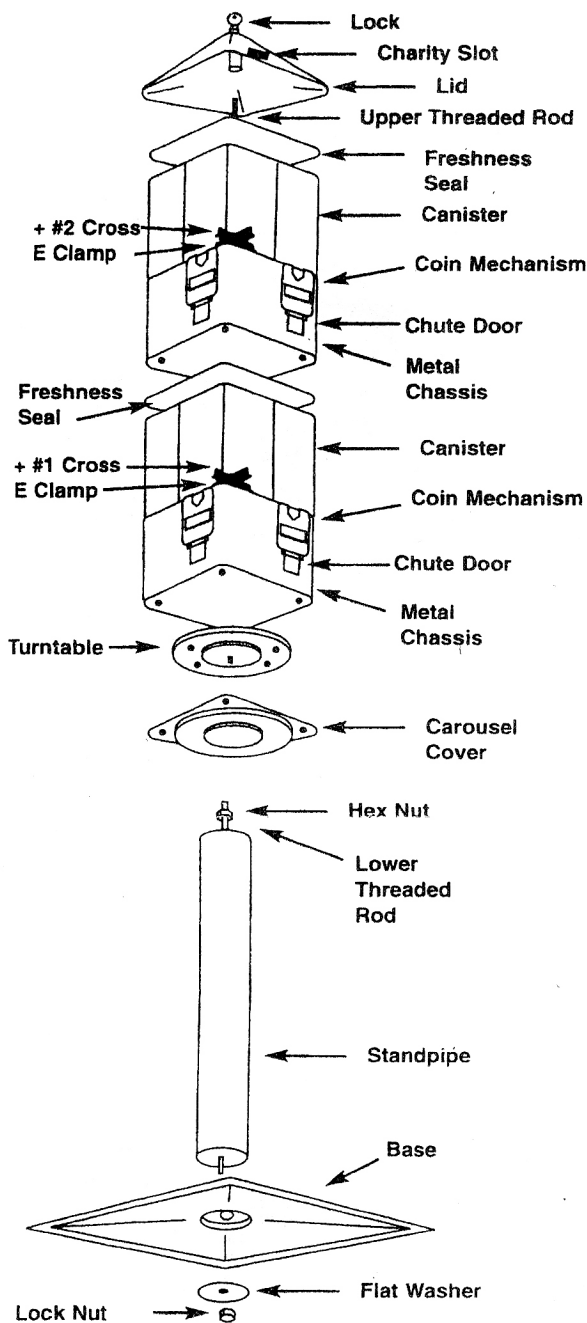

Once assembled, turn the machine upright and check vertical alignment. If the machine is crooked, the lock nut will need to be loosened and the standpipe readjusted.

The coin mechanisms may be a little stiff to start out, vend a few coins in each coin mechanism prior to placing machine.

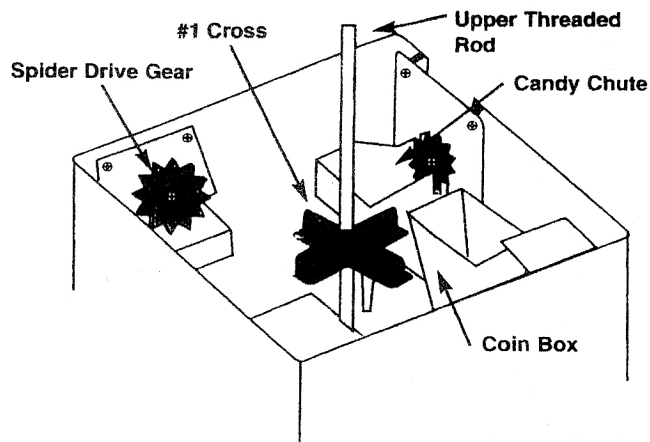

## INSTRUCTIONS

1. Remove instructions, stickers, standpipe(s), threaded rod(s) and washer(s) from top of foam packing and put packing upside down on floor.
2. If locks are already installed in lid proceed to step 6. If there is a black plug in the lid, locate locks. Locks will be in one of the poles in the box marked "Locks in pole" or in the service package.
3. Slit plastic bag and remove black shipping plug from lid by turning the plug counter clockwise. Use a flat blade screw driver. (Plug is NOT designed for reuse)
4. Remove lid, install lock, turn lid and install lock nut on lock. Tighten lock nut using adjustable wrench or 7/8" wrench.
5. Reinstall lid and tighten lock by turning key clockwise until lid is securely snug on machine.
6. Remove key from lock by turning key either clockwise or counter clockwise until key is at a 90° angle to charity slot in lid.
  - key
  - slot
7. Remove machine from shipping box and place machine upside down in foam to assemble stand.
8. Turn the hex nut onto the threaded rod until it is approximately 3/4" from the end.
9. Turn the threaded rod into the turntable plate approximately 1/2".
10. Turn the hex nut until it contacts the turntable plate and tighten with a 1/2" wrench.
11. Install the standpipe, base, flat washer and lock nut onto the threaded rod. Tighten with a 1/2" wrench. Press down firmly on base when tightening lock nut. The lock nut is properly tightened if the threaded rod cuts completely through the plastic ring inside the lock nut.

\***TERMINATOR** has large canisters on top and a longer upper threaded rod, otherwise machines and parts are identical.